

TEXAS HUNTER[®]

P R O D U C T S



E-Z Lift Assembly Instructions

Parts List

Qty	Item	Qty	Item
1	Header Assembly with Pulley	1	5/16"x2-1/2" bolt and nuts
3	Upper Legs with T-Bolts	3	Chains with links
3	Lower Legs with Footpads	1	U-bolt
1	Winch and cable assembly	3	24" anchor stakes

1. Locate suitable assembly site. Site must have a clear area approximately 15 feet in diameter. At the assembly site, remove all of the components from the packaging and verify that there are no missing parts.
2. Attach the cable and winch to the top header assembly (with swivel pulley attached). Remove the cotter pin from the center pin of the pulley sheave. Slide the center pin out and lower the sheave from the side supports. Place the cable between the supports and replace the pulley sheave. Secure the center pin with the cotter pin.
3. Lay the top header assembly on the ground. On each of the three upper leg sections, loosen the T-bolt and slide each of the legs onto the top header assembly. Tighten all three T-bolts to firmly secure the legs to the header assembly.
4. Slide each of the lower leg sections over the ends of the top sections until flush with the stop. Make sure that the lower legs are installed so that the hole in the foot pad for the ground anchor stake is facing away from the center of the tripod. Raise the tripod to the upright position. (Raising the tripod requires two persons.)
5. Locate the lower leg that has a predrilled mounting hole approximately 3 feet above ground level. Attach the winch to the inside of the leg by bolting the winch mounting plate to the leg using the supplied f" x 22" bolt, washer and locknut through the mounting hole. Secure the winch by attaching the U-bolt around the outside of the leg and bolting to the winch mounting plate using a washer and nut on each side of the U-bolt.
6. Place the anchor stakes through the hole in each of the footpads and hammer into the ground to secure the assembly. Each stake must be completely embedded in the ground with the hook resting on the footpad.
7. Connecting the stabilizing chains:

Barrel Feeders - Attach the three chains with links to the eyelets on the tripod legs. Replace one stub-leg bolt with the eyebolts provided and connect opposite end of chains to prevent hopper from swinging and turning in the wind.

TF-300 Trophy Feeders – Note: The eyebolts in the hardware kit are not needed for Trophy Feeders. The chains will attach to the hopper braces using the 1/8" removable chain links and the tripod legs using the double latch fastener.

E-Z Lift